

# LAKELAND

## INSTRUCTION BOOKLET

# **2-IN-1 HAND AND STAND MIXER**



MODEL: 31789

## **LAKELAND 2-IN-1 HAND AND STAND MIXER**

Thank you for choosing the Lakeland 2-in-1 Hand and Stand Mixer.

Please take a little time to read this booklet before getting started and keep it in a safe place for future reference.

This 2-in-1 Hand and Stand Mixer is perfect for combining, folding, mixing, whipping and kneading ingredients for your favourite cakes, bakes, biscuits and breads.

This appliance can be used as a stand mixer or if you prefer to use it as a hand mixer you can easily detach the mixer from the stand. When in stand mixer mode, the mixer oscillates to create an even mix and the bowl automatically rotates making lighter work of mixing ingredients. Just add the ingredients into the bowl and the machine does the hard work for you.

Versatile attachments for a varied range of baking tasks: A mixing plate to help get an even mix, add to the bowl when using as a stand mixer to scrape the sides. Beaters for higher speeds when mixing cake mixtures, whipping creams and egg whites. Dough hooks to use on lower speeds for thicker mixtures such as bread and tough dough mixtures.

A powerful 300W motor with 5 variable speed controls for a range of baking tasks with an added Turbo speed function for a quick burst of extra speed.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.

Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

# CONTENTS

Product features.....4-5

Safety Cautions .....6-7

Assembling your 2-in-1 Hand and Stand Mixer and using for the first time .....8-10

Instructions for use ..... 11

A guide to speed settings ..... 12

Hints and tips..... 13

Frequently asked questions..... 14

Care and cleaning ..... 14

 
Electrical connections ..... 15

Recycling your electricals ..... 15

## PRODUCT FEATURES

1. Hand mixer
2. Beater/hook holes
3. Mixer cradle
4. Mixer release button
5. Cradle release button
6. Stand



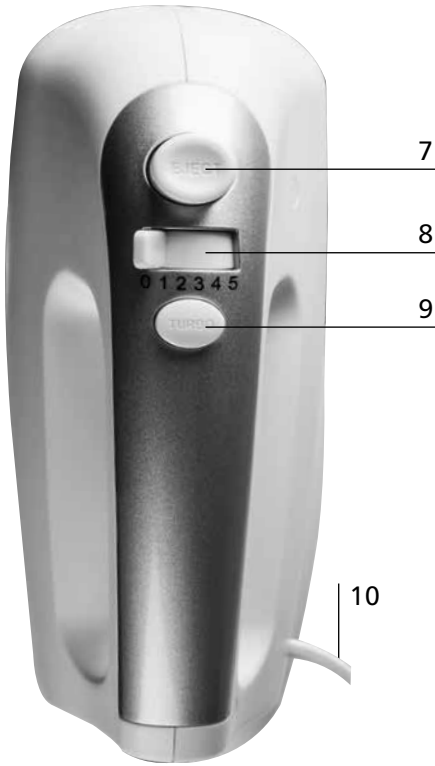

- 7. Beater eject button
- 8. Speed switch
- 9. Turbo button
- 10. Cord and plug




### Accessories

- 11. Mixing bowl
- 12. Mixing plate
- 13. Beaters
- 14. Dough hooks
- 15. Spatula

## SAFETY CAUTIONS

Carefully read all the instructions before using the appliance and keep in a safe place for future reference. Always follow these safety cautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this instruction book.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Make sure your electricity supply matches the voltage shown on the appliance.
- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact the Lakeland customer care team on 015394 88100.
- Do not use this appliance if the lead is damaged. If the lead is damaged it must be replaced with a special lead. Contact the Lakeland customer care team on 015394 88100.
- Always use the appliance on a dry, level, heat resistant surface.
- Unplug from the mains when not in use and before cleaning. To disconnect, turn the socket to "off" and remove the plug from the mains socket.
- Do not use any accessories or attachments with this appliance other than those recommended by Lakeland.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or lid in water or other liquids.
- Do not leave the lead hanging over the edge of a kitchen table or worktop. Avoid contact between the lead and hot surfaces.
- For indoor use only.
- For domestic use only.
- This appliance should be used for preparation of food as described within the instructions for use that accompany it.
- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead.

- To avoid injury or possible fire, do not cover the appliance when in use.
- Do not connect this appliance to an external timer or remote control system.
- An extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance. Do not allow the cable to hang over the edge of the worktop or touch any hot surfaces.
- This appliance complies with the basic requirements of Directives 2014/30/EU (Electromagnetic Compatibility) and 2014/35/EU (Low Voltage Directive).
- **WARNING:** A cut off plug inserted into a 13amp socket is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.
-  **CAUTION:** The plastic bags used to wrap this appliance or the packaging may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- Avoid contact with moving parts. To avoid the risk of injury and damage to the appliance, do not put your hands or utensils inside the mixing bowl while using the appliance.
- Do not operate the appliance when the bowl is empty.
- Do not use the appliance near an oven, hot surface or other source of heat. Use it at least 10cm away from walls and other surfaces to allow sufficient airflow.
- Always switch off and unplug the appliance before you attach or remove the beaters.
- Replace the beaters/hooks and bowl if they show any signs of damage.
- Never leave the appliance unattended while switched on.
- Be sure the beaters are securely in place before using the appliance.
- Do not use the appliance to mix heavy ingredients as the motor may overheat.
- Do not operate the mixer continuously for more than 4 minute. Allow the motor to rest between each use.

## ASSEMBLING YOUR 2-IN-1 HAND AND STAND MIXER FOR THE FIRST TIME

- Unpack the 2-in-1 Hand and Stand Mixer, remove all the packaging materials.
- Before first use, wipe the mixer and stand with a clean damp cloth.
- Wash all of the accessories, including the bowl, in warm soapy water, rinse and dry thoroughly. These are all dishwasher safe.
- Make sure that all parts are clean and dry before assembling the product.

**WARNING:** Do not insert the plug into an electrical outlet, or turn on the 2-in-1 Hand and Stand Mixer before you have fully assembled it.

### ATTACHING THE BEATERS AND DOUGH HOOKS



- Push the beaters into the holes until you hear them 'click' into place.
- The beater with the gear on needs to be in the left-hand hole.



## PREPARING THE STAND



- Press the release button on the stand, raise the cradle.



- Place the mixing bowl onto the base of the stand, twisting it clockwise until it locks into the base of the stand.



- Insert the mixing plate over the edge of the mixing bowl, locating the arms of the mixing plate into the grooves on the stand.



- Press the release button and lower the cradle of the stand down until it clicks into position.



- Attach the hand mixer to the stand by placing it onto the cradle, ensuring it locks into place.
- Ensure the beater/hook with the plastic gear sits into the cradle with the corresponding drive gear.
- The 2-in-1 Hand and Stand Mixer is now ready to use.

## INSTRUCTIONS FOR USE

- Make sure the 2-in-1 Hand and Stand Mixer is unplugged and on a level, dry surface.
- When you switch on the appliance for the first time there may be a slight burning smell, this is normal and will stop after a few uses.






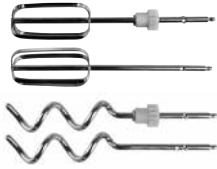
- Press the release button on the stand and raise the cradle.

- Place your ingredients into the mixing bowl.
- Press the release button on the stand and lower the mixer until it clicks into place.
- Plug in the 2-in-1 Hand and Stand Mixer and switch on at the socket.
- Use the speed switch, sliding sideways, to select your desired speed. Start off on '1' then increase the speed as required.
- You can press the turbo button while mixing for a short fast burst of speed.
- When your mixture is ready move the speed switch back to '0' and lift the mixer using the release button on the stand.
- The beaters and dough hooks can only be removed when the speed switch is in the '0' position.

# A GUIDE TO THE SPEED SETTINGS

The 2-in-1 Hand and Stand Mixer has 5 speed settings. Begin mixing your ingredients on a low setting and increase the speed slowly.

**Please note:** These are recommendations when using the mixing bowl supplied.

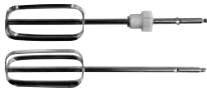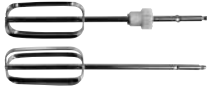Attachments	Recommended Speed	Use
<b>Beaters</b> 	1-2 minutes	Use lower speeds for combining dry ingredients with liquid, and rubbing fat into flour for pastry.
<b>Beaters</b> 	3-5 minutes	Use medium to higher speeds for mixing cakes, whipping cream, meringues, batters, eggs and creaming butter and sugar.
<b>Dough Hooks</b> 	1-5 minutes	To use on thicker mixtures such as bread, biscuit dough and muffin mix.  Use lower speeds for thicker mixtures such as tough dough mixtures.
<b>Beaters or Dough Hooks</b> 	Turbo speed	Use for a quick burst of speed when whisking and whipping mixtures and beating eggs.

## HINTS AND TIPS

- If you wish to mix larger quantities, remove the mixer from the stand and use it as a hand mixer with a larger bowl.
- When mixing, if the appliance starts to slow or labour, increase the speed.
- For best results, add liquids to your mixture first. Turbo button – when used as a hand mixer it can be used at the end of mixing to clean your attachments. Lift them above your mix, keeping them in the bowl, press turbo to remove excess mixture.
- To re-knead bread dough, remove the mixer from the stand and use as a hand mixer.
- To prevent splattering and flour dusting; lower the beaters/hooks fully into the mixture before switching the mixer on. When switching it off, allow the beaters/hooks to stop rotating before you remove them from your mixture.
- Replace the beaters/hooks if they show any signs of damage.
- **DO NOT** use the mixer with heavy ingredients as the motor may overheat. If the appliance seems to be struggling to mix, switch off and unplug the appliance at the socket and reduce the amount of ingredients in the bowl.
- Always switch off and unplug the appliance before changing the attachments or removing the mixing bowl from the base unit.

## FREQUENTLY ASKED QUESTIONS

**Question:** Why is my 2-in-1 Hand and Stand Mixer not working?

**Answer:** The mixer may not be plugged in or the speed has not been selected. Check the mixer is plugged in and switched on. Move the speed switch up a setting.

**Question:** Why are the beaters struggling to rotate?

**Answer:** The mixture is too thick, add more liquid. If your recipe states otherwise, your mixture cannot be mixed with a mixer. You may need to soften the ingredients or chop them into smaller pieces before further mixing.

**Question:** Why is my mixture splattering?

**Answer:** The speed setting is too high. Select a lower speed and fully lower the beaters into the mixture before starting to mix.

## CARE AND CLEANING

- Switch off and unplug the 2-in-1 Hand and Stand Mixer at the socket before cleaning and when not in use.
- Press the eject button and remove the beaters/hooks from the mixer before cleaning.
- Clean thoroughly before using for the first time and after every use.
- Check the parts for wear or damage after every few uses.
- Do not use abrasive cleaners or steel wool.
- Never immerse the hand mixer or stand in water or any other liquid.
- To clean the outer surfaces, wipe with a clean damp cloth and dry thoroughly before storing.
- All the accessories and mixing bowl are dishwasher safer.
- Store the 2-in-1 Hand and Stand Mixer with the power cable loosely coiled. Never wrap it tightly around the appliance.

 
## ELECTRICAL CONNECTIONS

This appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications. If the fitted plug is not suitable for your socket outlets, it should be cut off and carefully disposed of. To avoid an electric shock, do not insert the discarded plug into a socket.

This product is a Class 2 electrical appliance and does not include an earth wire.

### FITTING A NEW PLUG

If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown here. The wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

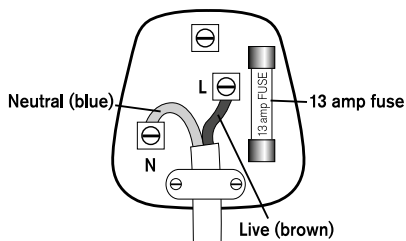

Connect **BLUE** to Neutral (N)  
Connect **BROWN** to Live (L)  
13 amp fuse to be used

If the colours of the wires in the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The wire which is coloured blue **MUST** be connected to the terminal which is marked with the letter N (Neutral). The wire which is coloured brown **MUST** be connected to the terminal which is marked with the letter L (Live).

Before refitting the plug cover, check that there are no cut or stray strands of wire inside the plug. Use a 13 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are at all unsure which plug or fuse to use, always refer to a qualified electrician.

**Note:** after replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EU Directives: 2014/35/EU (Low Voltage Directive) and 2014/30/EU (EMC Directive).

## RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electricals to recycling points set up around the country.

Visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) to find your nearest recycling point.



**Lakeland**

Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ

Tel: +44(0)15394 88100 [www.lakeland.co.uk](http://www.lakeland.co.uk)